



Solutions for a Cleaner Environment



PROCEDURE FOR BIOHAZARD SPILLS IN ISOLATED OR LOCALIZED CONTAMINATION AREAS

Bloodborne Pathogen Clean-Up



SUPPLIES IN KIT #7353:

- 1 pair disposable gloves
- 1 disposable face shield
- 1 disposable face mask
- 1 pair disposable shoe covers
- 1 disposable apron
- 1 absorbent pack
- 2 disposable towelettes
- 2 scoops/scrapers
- 2 red biohazard bags w/ ties
- 1 disposable towel
- 1 instruction sheet
- 1 can 12oz disinfectant spray with HIV-1 tuberculocidal claim

1

Close or block off the affected area using a wet floor sign or safety cone



2

Put on apron, face mask, face shield, shoe covers and gloves



3

Sprinkle the absorbent material onto spill & allow to sit for 1-2 minutes or until content jells



4

Using the scoop, completely pick up all the jelled substance



5

Place the contents into one of the red biohazard bags



6

Seal the bag tightly with twist tie



7

Put sealed bag in second unsealed bag



8

Once spill is completely cleaned up, place the shovel into the outer bag



9

Spray disinfectant over the spill area and let sit for as long as the label recommends



10

Thoroughly wipe with disposable towelette



11

Discard towelette, apron, face mask, face shield, and shoe covers into red biohazard bag



12

Remove disposable gloves as follows:



a. With right hand, pinch palm of glove on left hand and pull left glove down and off fingers



b. Form left glove into a ball and hold in fist of right hand



c. Insert two fingers of left ungloved hand under inside rim of right glove on palm side



d. Push glove inside out & down onto fingers and over balled left glove



e. Grasp gloves with left hand and remove from right hand



f. Discard gloves into the outer red biohazard bag

13

Seal outer red biohazard bag tightly with twist tie



14

Dispose of the bag in accordance with local regulations




15

Thoroughly wash hands



16

Re-open the affected area

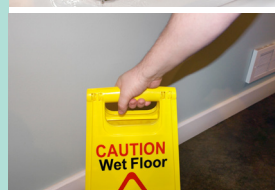

WARNING: Do NOT use any other cleaning tools. Everything needed to clean biohazardous spills is in this kit. For refills or to order Bloodborne Pathogen Kit #7353, please call a number below or visit catalog.alco-chem.com

WWW.ALCO-CHEM.COM

45 N. SUMMIT STREET / AKRON, OH 44308 / 330.253.3535 / 1.800.589.2526
1303 PARK AVENUE SW / CANTON, OH 44706 / 330.833.8551 / 1.800.437.5248